


How to install SPB 100/200/300/400

- ① Dig a hole in of 19.6 x 19.6x 19.inch




- ② Insert the installation bracket with dimensions of 3.6 x 3.6 inches x 27.5 inches in the hole.

- ③ Stich 2 irons of 8mm diameter cross wise in the bracket

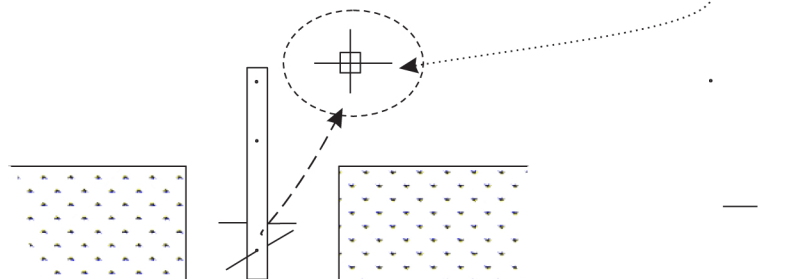


- ④ Poor Quick dry concrete

- ⑤ check with spirit level

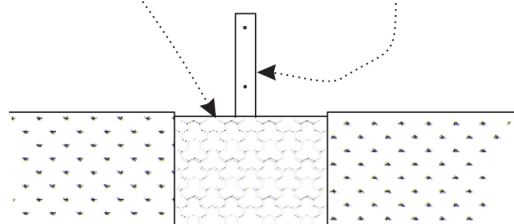

- ⑥ When Concrete is dry, slide the pole (bollard) over the installation bracket

- ⑦ Fix the pole (Bollard) with M6 screws

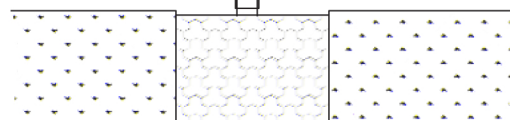

*Attention,
After installation you put the sequential solar led light in service.
Keep in mind you install the right sequential address.*